

1 CHARGING THE FLIGHT BATTERY PACK

You will need to have the Flight Battery Pack charged and the Sky Rangers™ transmitter radio operating to complete the final assembly of the R/C Jet. Follow the steps below to charge the Flight Battery Pack and put the transmitter into operation. While the battery is being charged, you can begin assembly of your R/C Jet™

OPERATING THE POWER CHARGER

The Power Charger™ operates from your car's battery. Follow the SAFETY GUIDELINES when using this charger.

CAUTION: When charging, it is possible for the Flight Battery Pack and Charger to get very warm. To prevent any damage to the model, yourself or your vehicle follow these safety guidelines.

SAFETY GUIDELINES:

- Never operate charger with car engine running.
- Never operate charger or charge battery in your vehicle.
- Always remove flight battery pack from airplane before charging.
- Always discharge the flight battery pack before charging.

- Do not hold charger or flight battery pack while charging.
- Do not discharge/recharge the flight battery pack if hot. Allow to cool.
- Unplug charger from cigarette lighter after each use.

CHARGING THE FLIGHT BATTERY PACK

NOTE: To discharge the Flight Battery, run Ducted Fan until it stops.

Plug the Flight Battery connector into the short lead connector of the Charger. If Flight Battery is in plane, unplug and remove before charging.

Turn the timer to the **5:00** and note that the LED is illuminated. When the timer runs down to "0" your flight battery pack is charged.

Lay the Charger and Flight Battery Pack on a smooth surface alongside your vehicle. Plug the other end of the charger cord into the cigarette lighter of your vehicle.

This end plugs into the Flight Battery Pack.

Timer Knob

LED indicator light (Lights when charging)

This adapter plugs into the cigarette lighter of your vehicle.

When charging is complete, unplug charger cable from the cigarette lighter. Unplug the Flight Battery Pack from the Charger.

HELPFUL HINT:

- Before the first flight, charge and discharge the flight battery pack 3 times for optimal battery performance.
- If a day or more goes by without charging the battery, or you are not sure of how much charge is left, discharge the battery pack, then recharge before flying.