

WACKY WIGGLE





Skill Level

INTERMEDIATE

MODEL ROCKET INSTRUCTIONS

KEEP FOR FUTURE REFERENCE

IMPORTANT: Please record date found on decal and keep for future reference.



May not apply to all kits. For safe handling of plastic cement, epoxy, spray adhesive, CA glue, CA accelerator, paint/finishing materials, see manufacturer's warnings and follow instructions for use. To avoid injury, use extreme caution when using hobby knife, scissors, drills, and any cutting tools.

SUPPLIES









 
060411-802C Green Tube Coupler




060413-802C Green Tube Coupler with



Launch Lug



060412-Red Launch Lugs (use 2)

 

031687 Body Tube Sections





035021 Engine Hook

090001-1405

Not Used

072663-Red Nose Cone

060412-Red Front Engine Ring

060407

 
Braided Cord (1 spare) **x2**

 


060412-Red

Rear Engine Ring

030331 Engine Mount Tube






Engine Mount Section


x2

 
060412-Red





060412-Red Notched Engine Mount Section




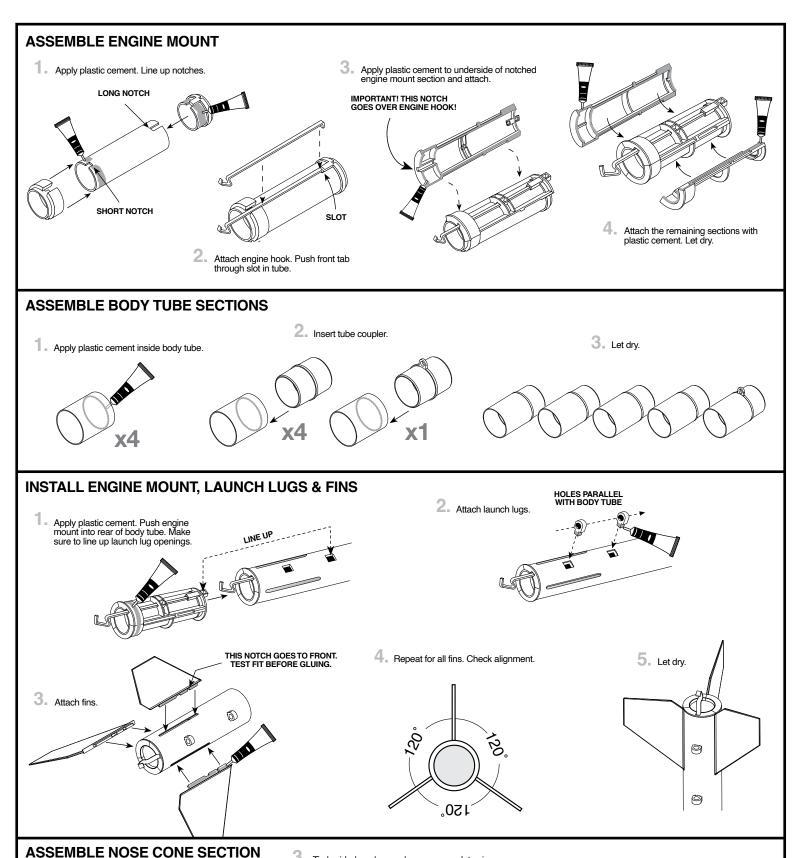

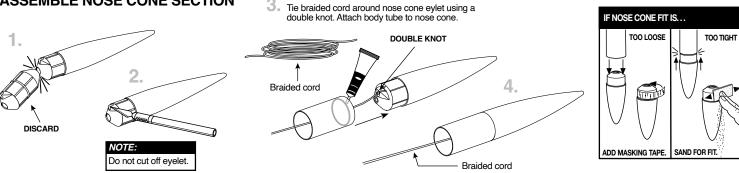

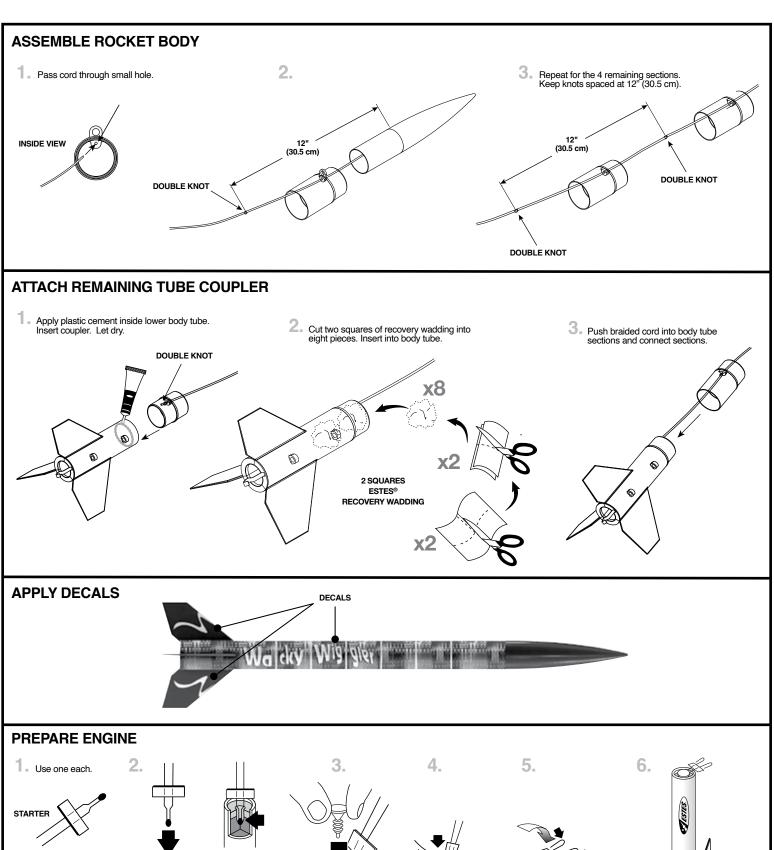

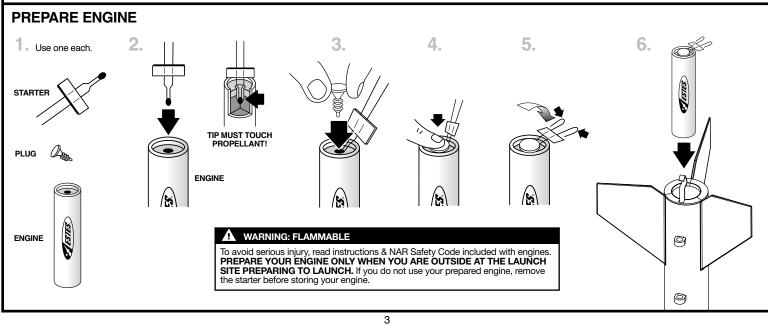

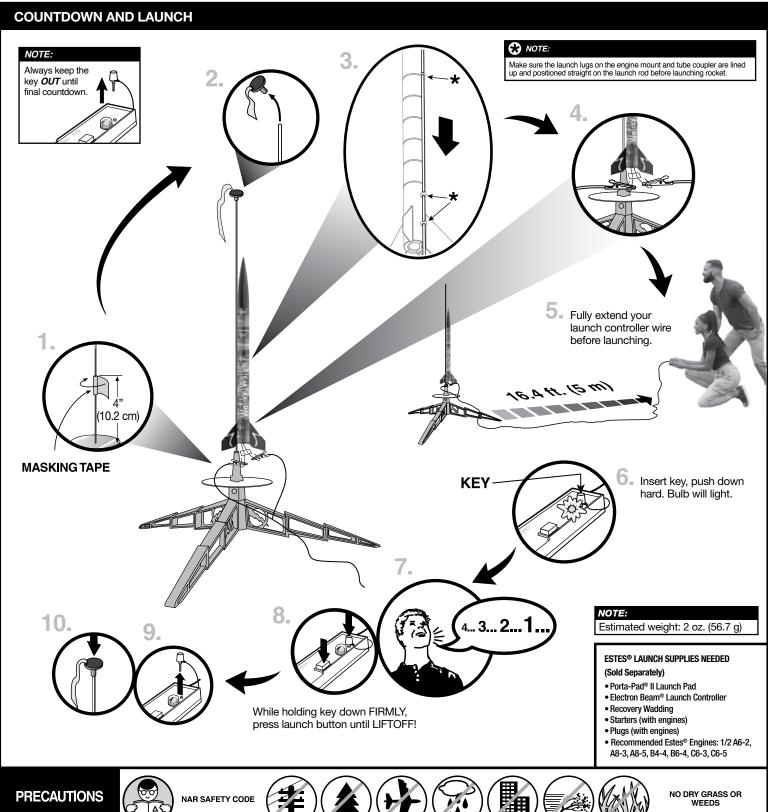















PRE-LAUNCH CHECK For safety, never launch a damaged rocket. Check the rocket's body, nose cone and fins. Also, check the engine mount, recovery system and launch lug(s). Repair any damage before launching the rocket.

FLYING YOUR ROCKET Choose a large field (500 ft. [152 m] square) free of dry weeds and brown grass. The larger the launch area, the better your chance of recovering your rocket. Launch only with little or no wind and good visibility. Always follow the National Association of Rocketry (NAR) SAFETY CODE (enclosed).

MISFIRES TAKE THE KEY OUT OF THE CONTROLLER. WAIT ONE MINUTE BEFORE GOING NEAR THE ROCKET. Disconnect the micro-clips and remove the engine. Take the plug and starter out of the engine. A burned starter means the starter tip was not touching engine propellant. Install a new starter; be sure the tip is touching propellant inside the engine. Push the plug in place. Repeat steps under Countdown and Launch.

PN 090004-1405 (10-25)