







MISFIRES TAKE THE KEY OUT OF THE CONTROLLER. WAIT ONE MINUTE BEFORE GOING NEAR THE ROCKET. Disconnect the micro-clips and remove the engine. Take the plug and starter out of the engine. A burned starter means the starter tip was not touching engine propellant. Install a new starter; be sure the tip is touching propellant inside the engine. Push the plug in place. Repeat steps under Countdown and Launch.

© 2024 Estes Industries, LLC • All Rights Reserved Estes Industries, LLC • 1295 H Street, Penrose, CO 81240-9698 • Made in Guangdong, China - 22

PAF