

MODEL ROCKET INSTRUCTIONS

KEEP FOR FUTURE REFERENCE

IMPORTANT: Please record date found on decal and keep for future reference.

READ ALL INSTRUCTIONS. Make sure you have all parts and supplies. Test fit all parts before applying glue. Refer to your glue manufacturer's dry times during build.

SUPPLIES



























SCISSORS

PENCIL

RULER

SANDPAPER

EPOXY

YELLOW GLUE CLEAR TAPE HOBBY KNIFE

031360 **X2** 8 in. body tube **X2**


MASKING **TAPE**

WHITE PRIMER


(OPTIONAL)

CLEAR COAT WHITE & BLACK

SANDING BLOCK

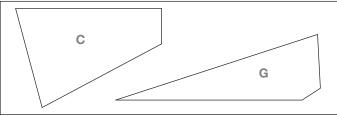




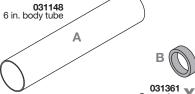





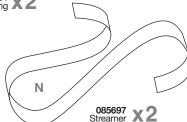








090001A-9722 Waterslide decal

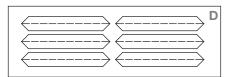



031963 161/4 in. body tube

090057-9722 Printed index stock




071096 Coupler pin

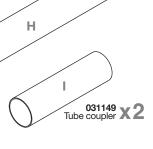


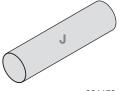



29mm yellow spacer tube **X2**




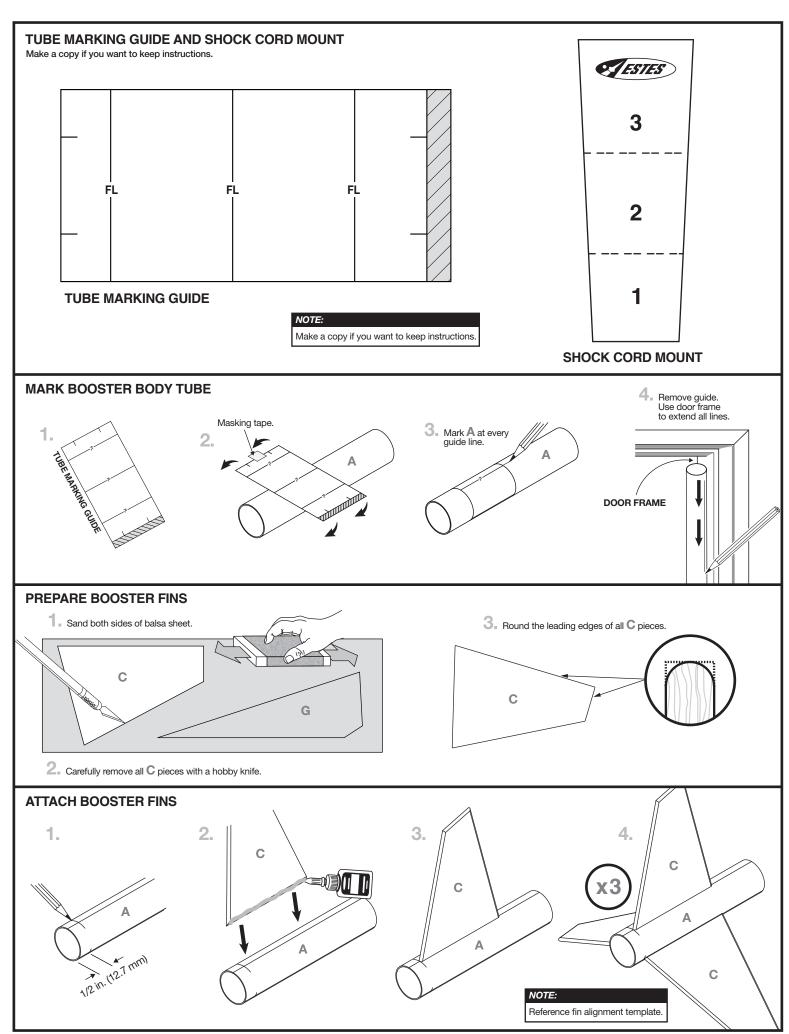


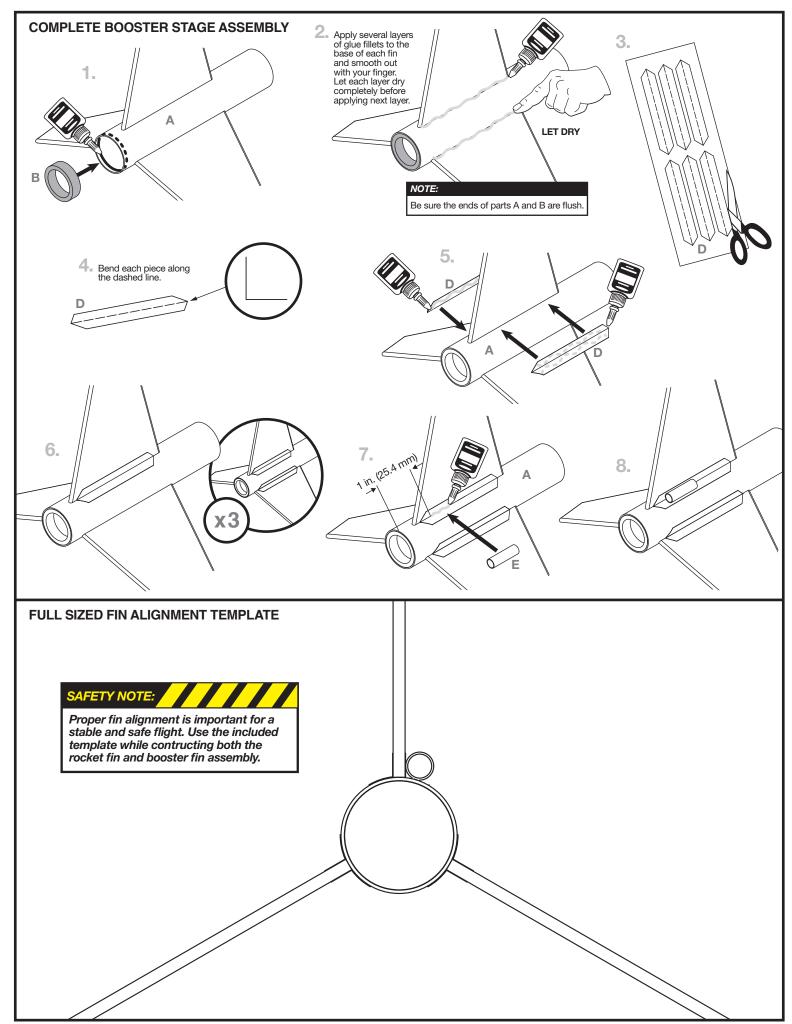

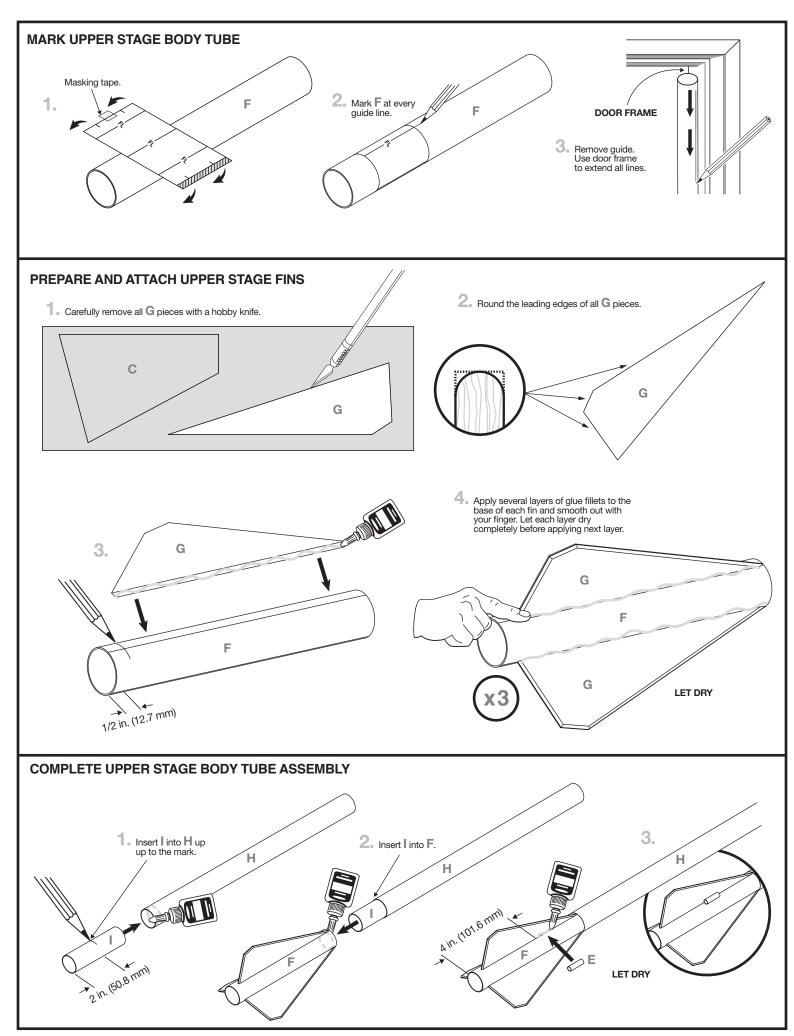

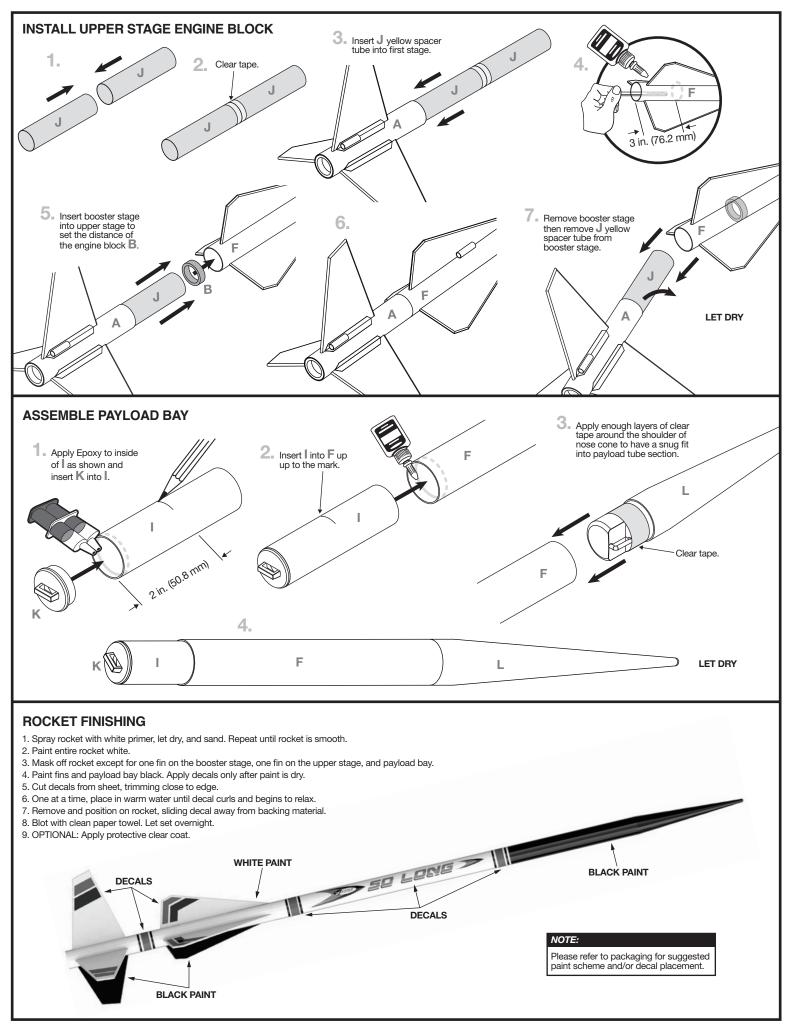

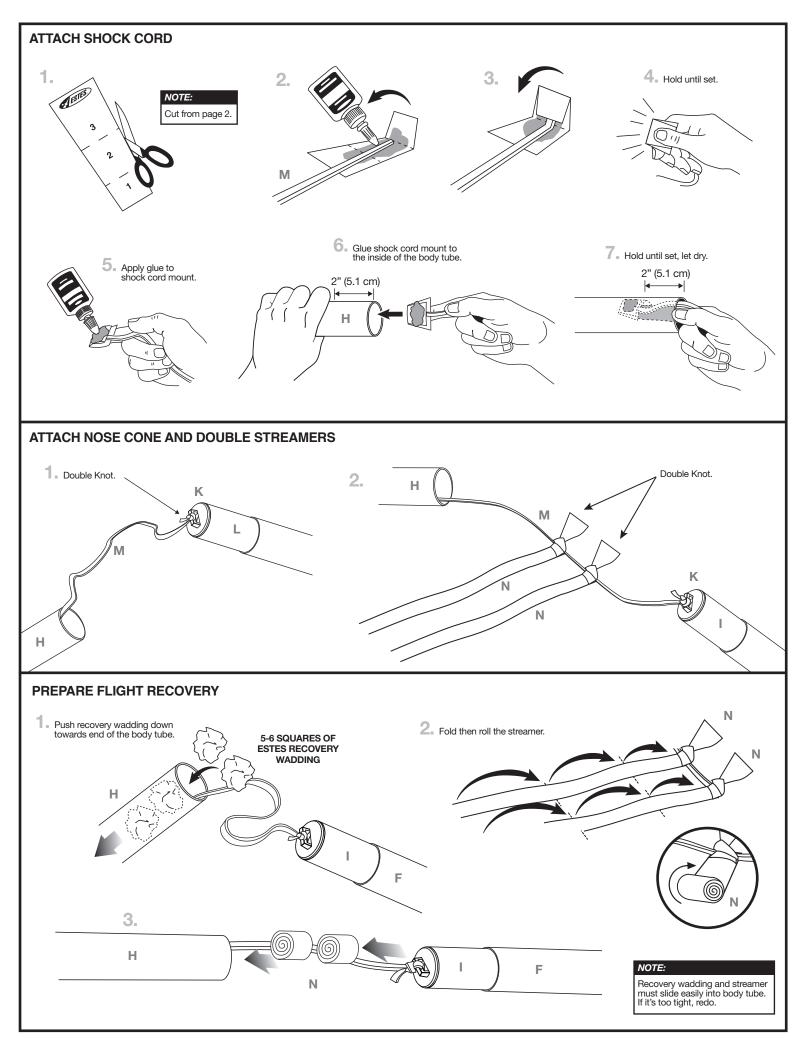

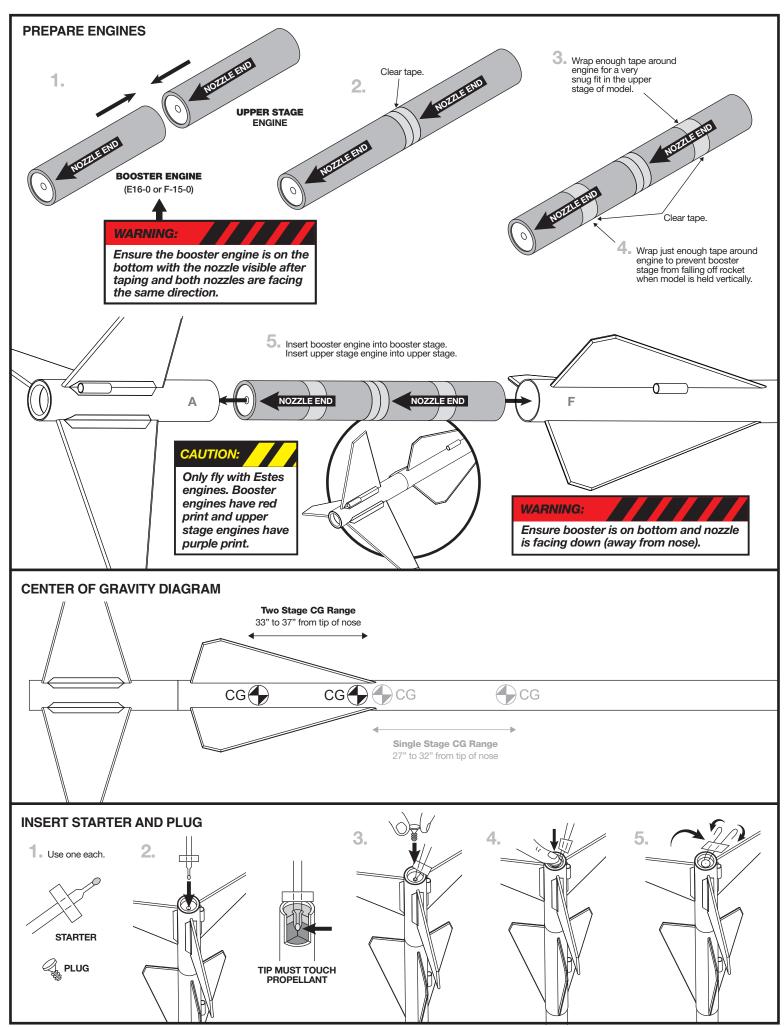

COUNTDOWN AND LAUNCH Key always out until finál countdown. Fully extend your launch controller wire before launching. Insert key. (7.6 cm) 6 Bulb will light. **MASKING TAPE** NOTE: Estimated weight: 6.3 oz. (178.6 g) **ESTES® LAUNCH SUPPLIES NEEDED** Firmly press and HOLD

While holding yellow button down FIRMLY, press launch red button until LIFTOFF!

(Sold Separately)

- Pro Series II[™] Launch Base
- Pro Series II[™] Launch Controller
- Recovery Wadding
- · Starters (with engines)
- Plugs (with engines)
- Recommended Estes® Engines: Single Stage: E16-6, E16-8, F15-6, F15-8

Booster stage: E16-0, F15-0 Upper stage: E16-8, F15-8

PRECAUTIONS



NAR SAFETY CODE











the yellow button and

begin countdown.





NO DRY GRASS OR WEEDS

PRE-LAUNCH CHECK For safety, never launch a damaged rocket. Check the rocket's body, nose cone and fins. Also, check the engine mount, recovery system and launch lug(s). Repair any damage before launching the rocket.

FLYING YOUR ROCKET Choose a large field (1000 ft. [305 m] square) free of dry weeds and brown grass. The larger the launch area, the better your chance of recovering your rocket. Launch only with little or no wind and good visibility. Always follow the National Association of Rocketry (NAR) SAFETY CODE (enclosed).

MISFIRES TAKE THE KEY OUT OF THE CONTROLLER. WAIT ONE MINUTE BEFORE GOING NEAR THE ROCKET. Disconnect the micro-clips and remove the engine. Take the plug and starter out of the engine. A burned starter means the starter tip was not touching engine propellant. Install a new starter; be sure the tip is touching propellant inside the engine. Push the plug in place. Repeat steps under Countdown and Launch.

© 2022 Estes Industries, LLC • All Rights Reserved Estes Industries, LLC • 1295 H Street, Penrose, CO 81240-9698 • Made in Guangdong, China

PN 090004-9722 (1-23)