

MARTE MK 2 BEFORE YOU START



SKILL LEVEL 3 - Recommended For Craftsman Rocketeers.

Read each step and study the accompanying drawings before doing any of the work called for in that step. Make sure you have all parts and materials. Check off each step as you complete it. Always test-fit parts together before applying glue. It will sometimes be necessary to sand edges of rings, tubes, etc. to obtain proper fit. If you are in doubt about the relative size or location of some parts, refer back to this exploded view drawing for clarification. Adequate glue joints are very important for a flying model rocket. Follow the instructions carefully in this regard.



A DAMON COMPANY

ESTES INDUSTRIES
PENROSE, CO 81240 USA

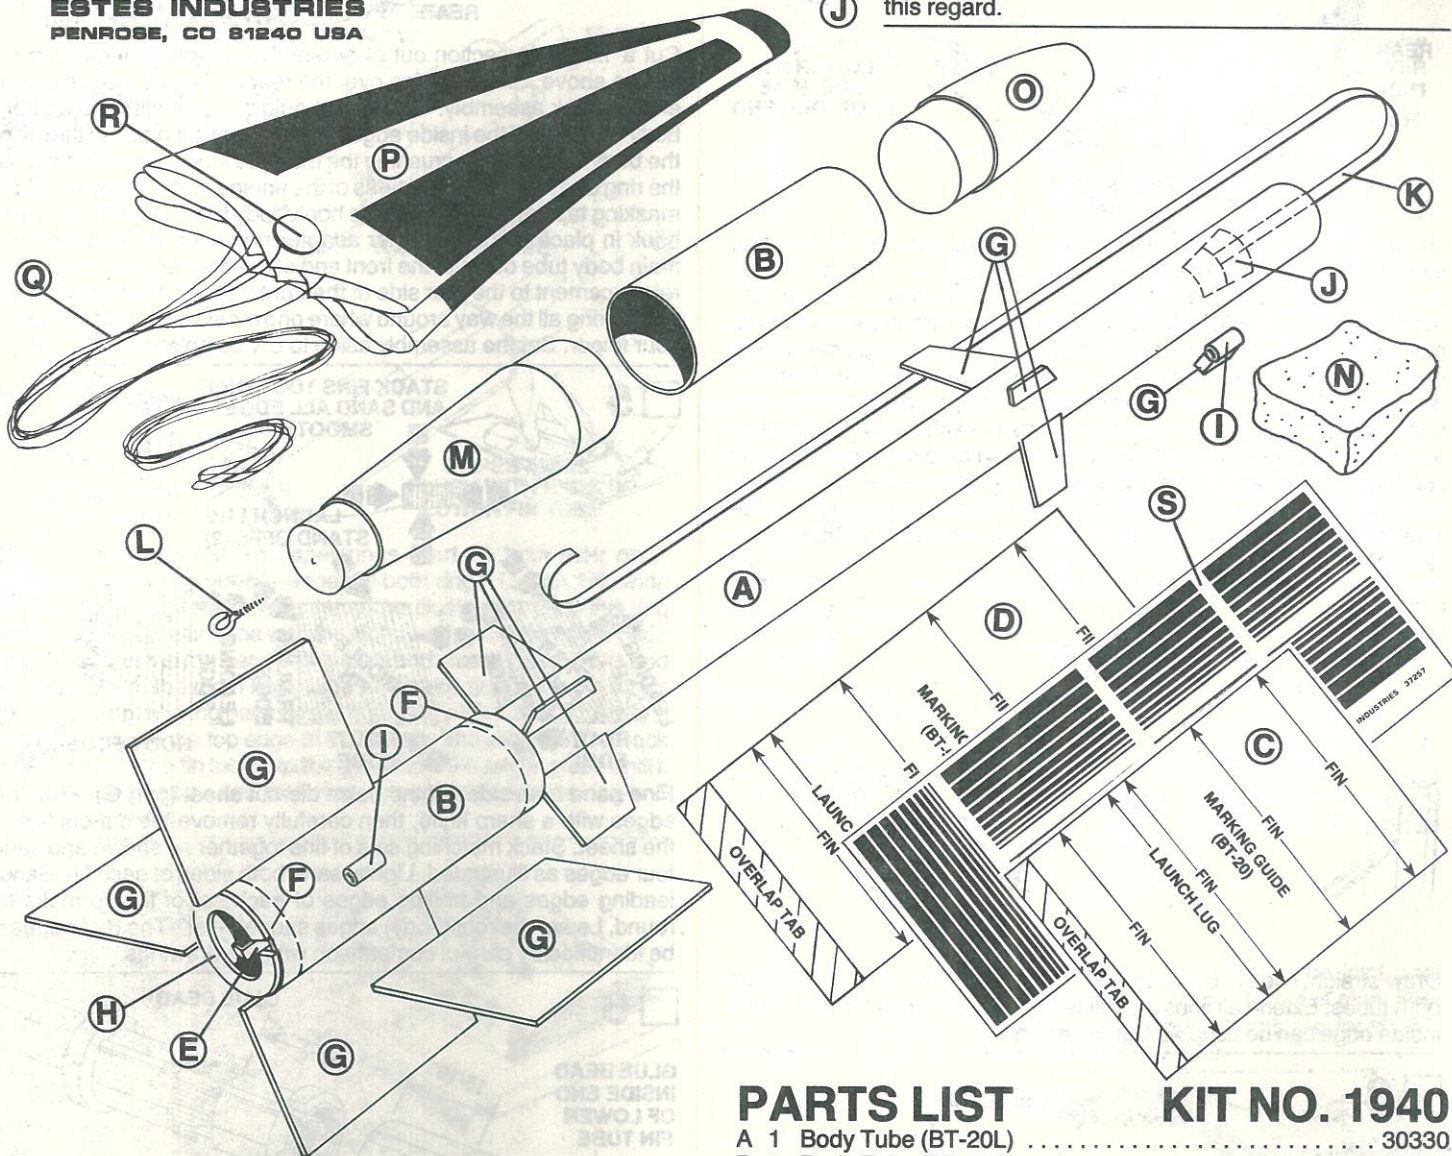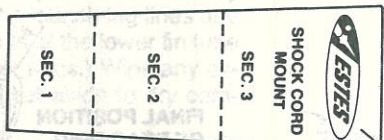

RECOMMENDED ENGINES:
A8-3, (1st Flt.), B4-4, B4-6, B6-4, B6-6,
B8-5, C6-5, and C6-7.

TOOLS AND MATERIALS

In addition to the parts included in this kit you will need: Scissors, household white glue (Elmer's, Titebond, or similar), pencil, ruler, fine or extra-fine grit sandpaper, sanding sealer, a medium-size modeling paint brush, modeling knife with sharp blade. Gloss white, gloss green & gloss red spray enamel, and Gloss-Cote spray.

For easy and positive alignment of the rear fins on your model, we recommend the use of Estes' Fin Alignment Guide, Part No. 2231.

PARTS LIST KIT NO. 1940

A	1	Body Tube (BT-20L)	30330
B	2	Body Tube (BT-50J)	30362
C	1	Main Body Tube Marking Guide (BT-20)	Page 5
D	1	Lower Fin Tube Marking Guide (BT-50)	Page 5
E	1	Metal Engine Hook (EH-2)	35025
F	2	Centering Rings (AR-2050)	30164
G	1	Balsa Die-Cut Fins (BF-1940)	32640
H	1	Paper Adapter Ring Set (RA-2050)	30124
I	1	Launch Lug (LL-2A)	38175
J	1	Shock Cord Mount	Page 1
K	1	Shock Cord (SC-1)	85730
L	1	Screw Eye (SE-2A)	38252
M	1	Balsa Adapter (TA-2050)	70006
N	1	Clay Weight (12 Grams)	85264
O	1	Balsa Nose Cone (BNC-50J)	70256
P	1	Parachute (PK-12A)	85564
Q	1	Shroud Line (SLT-72)	38237
R	1	Tape Discs Set (TD-3F)	38406
S	1	Decal (KD-1940)	37257